

## 657338 Sizzix® ScoreBoards™ Pro Die - Easel by Eileen Hull



1. Die-cut pieces as shown.



2. Attach the side flaps to the front using a strong adhesive.



3. Apply a strong adhesive to the Easel stand as shown.



4. With the flap folded, attach the Easel stand to the back of the Easel. Align the bottom of the stand with the bottom of the Easel.



5. Use a short length of string or ribbon to hold the bottom of the stand at the desired distance from the Easel.



6. Embellish as desired.